

jWIN

Vintage Design Telephone with Caller ID



Instruction Manual

JT-P430

Please read this manual carefully before operating and save it for future reference.

Have a question? Please visit <http://www.jWIN.com>

USER SAFETY GUIDE

INSTRUCTIONS ON ENVIRONMENT PROTECTION

Do not dispose of this product in the usual household garbage at the end of its life cycle; bring it to a collection point for the recycling of electrical and electronic appliances. This symbol on the product means the instructions for use or the packaging will inform about the methods of disposal. The materials are recyclable as mentioned in its marking. By recycling, material recycling, and other forms of re-utilization of old appliances, you make an important contribution to the protection of the environment. Please inquire at your local community administration for an authorized disposal location.



Important Safety Instructions

When used as directed, this unit has been designed and manufactured to ensure your personal safety. However, improper use may result in electric shock, fire hazards or other dangers. Please read all safety and operating instructions carefully before installation and use. Remember to keep this instruction manual handy for future reference. Take special note of all warnings contained in these instructions and on the unit itself.

- Read and follow all instructions in this manual.
- Unplug this telephone from wall jack before cleaning with a damp cloth.
- Do not use liquid or aerosol cleansers to clean this product.
- Do not use this telephone in or near water (e.g. a bath tub, a sink, or a pool).
- To reduce the risk of electric shock, do not push objects through any slots of the phone or disassemble the telephone. Pushing objects into the telephone or opening (or removing) covers exposes wires and poses serious risks.
- Do not disassemble and/or reassemble this telephone yourself. Contact technical support when service is required.
- Do not place this telephone on a bed, rug, or on any similar surface or near a heat source. Openings for ventilation must not be blocked or covered.
- Do not place this telephone on an unstable cart, stand, or table as it may fall, resulting in damage.
- Avoid using this telephone during electrical storms to prevent the risk of electric shock from lightning.
- Unplug this telephone from the phone jack and contact Customer Support if the following conditions occur:
 - When it is exposed to rain or water
 - When it fails to operate normally
 - When it is dropped or its case is damaged
 - When it exhibits a distinct change in performance
- Do not use this telephone to report a gas leak in the vicinity of the leak.
- Follow all safety instructions and use this telephone with caution when installing or modifying telephone lines.
 - Do not install telephone wire during a lightning storm.
 - Only install telephone jacks in dry locations unless the jack is specifically designed for wet locations.
- Avoid touching un-insulated telephone wires or terminals unless the telephone line is disconnected at the network interface.

USER SAFETY GUIDE

Compliance (USA and Canada)

This product complies with the standards in Part 68 of the FCC Rules in the USA and CS-03 in Canada.

1. This product must be connected to the public switched telephone network through a modular telephone outlet or jack.
2. Upon the request of the local telephone service provider, the user of this product must provide the following information:
 - The “line” to which this telephone equipment will be connected (telephone number)
 - The telephone equipment’s FCC registration number and ringer equivalence number. This information is printed on the back or bottom of the unit.
3. If it is determined that this equipment is malfunctioning, the FCC requires that it not be used and that it must be unplugged from the modular outlet until the problem has been corrected.
4. If the product causes harm to the telephone network, the telephone company may temporarily discontinue telephone service. Whenever possible, the telephone company will contact a customer prior to a service interruption. If advanced notice is not possible, the customer will be notified as soon as possible. The customer will be given the opportunity to correct the problem.

TABLE OF CONTENTS

Getting Started	
General Features	6
In the Package	6
Location of Controls	7
Getting the Telephone Ready for Use	8
Installing the Batteries	8
Operational Instructions	
Basic Setup	9
Receiving Caller ID Information	11
Reviewing the Caller ID List	11
Erasing Data from the Caller ID List	11
Calling a Number from the Caller ID List	11
Last Number Redial	11
Flash Function	12
Mute Function	12
Basic Instructions for Making a Phone Call	12
Basic Instructions for Receiving a Phone Call	12
Troubleshooting and Specifications	13

GETTING STARTED

Thank you for purchasing the JT-P430 Vintage Design Telephone with Caller ID. Please read and follow the instructions in this manual carefully to ensure that your product operates correctly.

General Features

- 12 hour format alarm clock with Snooze Function
- Caller ID
- New Incoming Call Indication
- Memory for up to 50 Messages
- 16 Digits Name and Number Display for Incoming Calls
- Tone/Pulse Switch
- Low Battery Indicator
- Ringer Volume Control (Hi/Lo/Off)
- Receiver Volume Control (Hi/Lo)
- Power Sources
 - 9V (AC/DC) Power Adapter
 - 6V (AAA x 4) Battery (for backup)



In the Package

- Telephone base with alarm clock feature
- Corded handset with coiled cord
- Telephone line cord
- AC adapter (UL/cUL listed)
- Instruction manual (English, Spanish, French)
- Warranty card



GETTING STARTED

Location of Controls

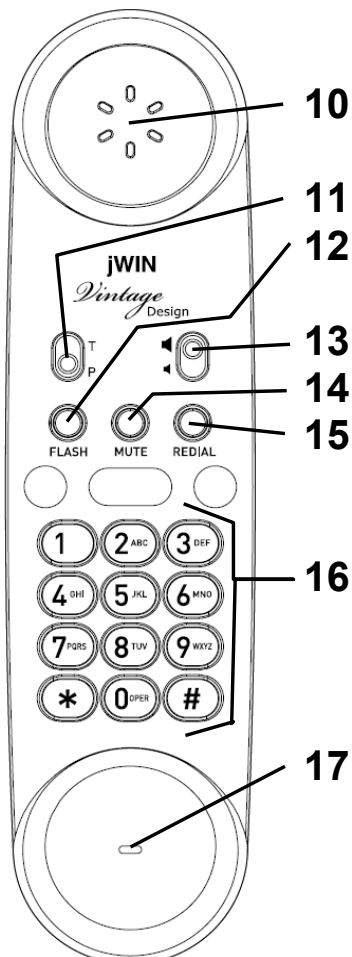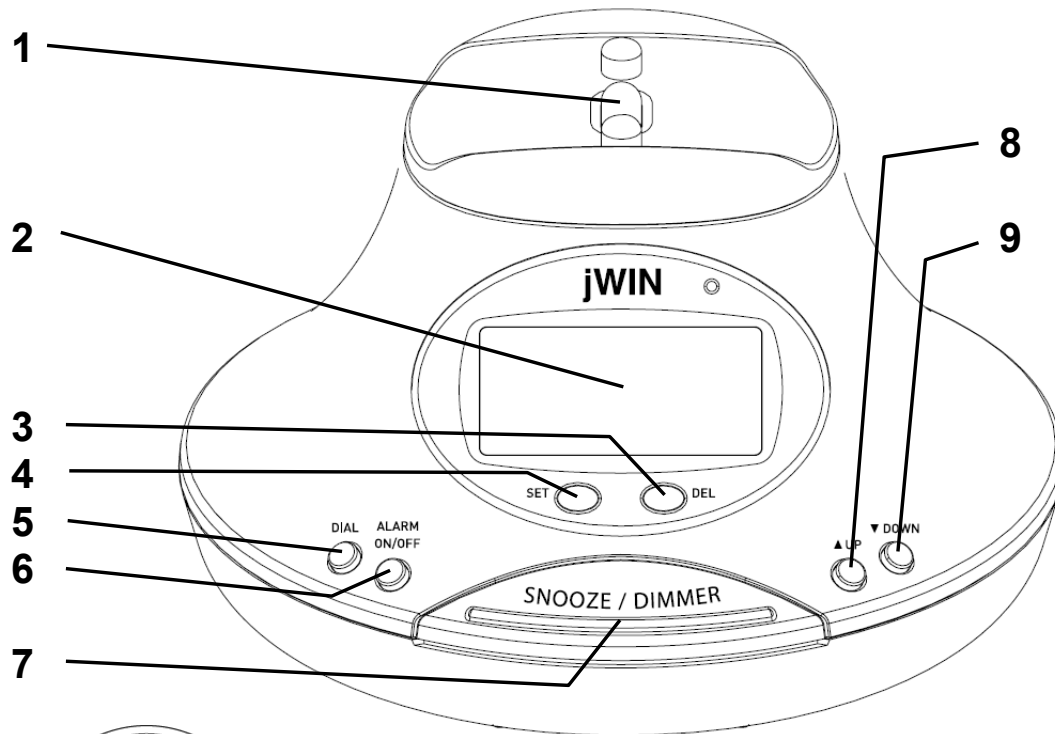

1. Phone Hook
2. LCD Screen
3. DEL Button
4. SET Button
5. DIAL Button
6. ALARM ON/OFF Button
7. SNOOZE/DIMMER Button
8. UP Button
9. DOWN Button
10. Earpiece
11. TONE/PULSE Switch
12. FLASH Button
13. EARPiece VOLUME Switch
14. MUTE Button
15. REDIAL Button
16. NUMERIC Keypad
17. Mouthpiece

GETTING STARTED

Getting the Telephone Ready for Use

1. Choose a desired flat, level surface location for the unit.
2. Plug one end of the coiled telephone cord into the jack on the handset, and the other into the matching jack on the unit's base.
3. Plug one end of the flat telephone cord into the jack in the rear of the unit's base (marked TEL-LINE), and the other end into the wall jack which supplies telephone service.

Installing the Batteries

The JT-P430 requires four (4) AAA batteries, which are used to operate the telephone, the LCD display, and to retain Caller ID data and any settings programmed into the phone. Using an optional 9V adapter (see Notes below) will increase the battery's life span, requiring less frequent battery replacement.

1. Remove the battery compartment cover at the bottom of the unit.
2. Carefully install four (4) AAA batteries by observing the polarity direction shown in the battery compartment.
3. Replace the cover.

Notes:

- Whether installing batteries for the first time or replacing them, do not mix old and new batteries, nor should alkaline, standard (zinc-carbon), or rechargeable (nickel-cadmium) batteries be used together.
- When not using the phone for a long period of time, remove the batteries to prevent possible leakage and corrosion. Keeping the phone powered by the optional AC adapter, discussed below, will preserve all data and settings in the phone's memory.
- If neither the batteries nor an AC adapter are connected, the JT-P430 will still be able to place and receive calls, but the telephone, the ability to store Caller ID data, and the LCD display functions will not operate.
- When batteries are used without an AC adapter, they should be replaced when the display dims.
- When replacing the batteries without an AC adapter connected, it's the best to pick up the handset before removing the batteries. Doing so prevents the loss of stored Caller ID data and programmed settings while the batteries are being replaced. If not done, it's possible that all settings and data in the phone's memory will be lost.

OPERATIONAL INSTRUCTIONS

Basic Setup

Note: Please be sure the telephone lines are connected well and batteries or AC adapter are installed before starting setting. Press the **DIAL** button for three seconds to enter the setting menu, use **▲UP** or **▼DOWN** buttons to select from the menu including Set Language, Set Local Area Code, Set Time/Date and LCD Contrast. Press the **DIAL** button to exit setting manual.

A. SET LANGUAGE

- When the LCD displays "SET LANGUAGE", press the **DIAL** button to enter.
- Use the **▲UP** or **▼DOWN** buttons to select the desired language (English, French, Spanish, German, Italian, Portuguese, Turkish, Danish, Polish, Swedish, or Dutch).
- Press the **DIAL** button to confirm.

B. SET LOCAL AREA CODE

- When the LCD displays "LOCAL AREA CODE", press the **DIAL** button to enter.
- Use the **▲UP** or **▼DOWN** buttons to select the first digit of area code.
- Press the **DIAL** button to confirm the first digit.
- Use the same method to set the rest digits

C. SET TIME/DATE

- When the LCD displays "SET TIME/DATE", press the **DIAL** button to enter.
- Press the **▲UP** or **▼DOWN** buttons to set the present hour.
- Press the **DIAL** button to confirm the hour.
- Use the same method to set minute, month and day.

D. LCD CONTRAST

- When the LCD displays "LCD CONTRAST", press the **DIAL** button to enter.
- Press the **▲UP** or **▼DOWN** buttons to select the desired contrast level from 1 to 5.
- Press the **DIAL** button to confirm.

E. EXIT OPTIONS

- When the LCD displays "EXIT OPTIONS **▲▼UP DOWN**", press the **DIAL** button to exit the setting menu.

F. ALARM CLOCK

- Press the **SET** button to enter the alarm clock setting.
- The LCD will display 'SET ALARM', press the **▲UP** or **▼DOWN** buttons to select **ALARM 1** or **ALARM2**
- Press the **SET** button to confirm
- The LCD will display 'ALARM ON /OFF', press the **▲UP** or **▼DOWN** buttons to select alarm on or off.
- Press the **SET** button to confirm.
- The hour will flash. Press the **▲UP** or **▼DOWN** buttons to select the desired hour.
- Press the **SET** button to confirm.
- The minute will flash, press the **▲UP** or **▼DOWN** buttons to select the desired minute.
- Press the **SET** button to confirm.

OPERATIONAL INSTRUCTIONS

Basic Setup-continued

- Press the **DEL** button to exit the setting
- If set alarm **ON**, the alarm icon will be displayed on LCD.
- When time to alarm, press the **SNOOZE/DIMMER** button to postpone the alarm time.
- Press the **ALARM ON/OFF** button to disable the alarm function

G. SNOOZE FUNCTION

- Press the **SNOOZE/DIMMER** button for three (3) seconds to enter Snooze setting.
- Press the **▲UP** or **▼DOWN** buttons to select the snooze time from 1-59 minutes.
- Press the **SNOOZE/DIMMER** button to confirm
- After activating the snooze function, when time to alarm, press the **SNOOZE/DIMMER** button to postpone the alarm time.
- The Alarm will sound again when it reaches the snooze time

H. DIMMER FUNCTION

- In the on-hook state and use with AC adapter, press the **SNOOZE/DIMMER** button once to make LCD lighter and press the **SNOOZE/DIMMER** button again to make it darker.

I. TONE/PULSE SELECTABLE



Select the dialing mode that your telephone requires by sliding the **T-P** switch to 'T' position for tone dialing and to 'P' position for pulse dial.

Note: Under the pulse dial state, press ' * ' to change to tone dial.

J. RINGER HI/LO/OFF SELECTABLE

- Slide the **RINGER** switch to **HI** position or **LO** position to turn the ringer on. **HI** for high volume and **LO** for low volume
- Slide the **RINGER** switch to **OFF** position to turn the ringer off. The ringer will not be activated by any incoming calls. Don't forget to turn the ringer **ON** when you are ready to receive calls, otherwise, you will not hear the ringing sound.

K. HANDSET VOLUME ADJUSTMENT

- Slide the **RECEIVER** switch to '  ' position for high handset volume and '  ' for low handset volume

OPERATIONAL INSTRUCTIONS

Receiving Caller ID Information

Note: Your Telephone Company must offer caller ID service in order for the caller ID function can be activated.

- A. Incoming Call Display
 - When there is an incoming call, the LCD will display the number, area code, name, time and date of the call.
- B. Please note the following indicators:
 - **“UNAVAILABLE”**
The call is made through a telephone company, which does not offer Caller ID service or does not transfer calls by long distance net
 - **“BLOCKED CALL”**
Some areas allow the option for callers to prevent the telephone data from being displayed on others' telephone. If you received such a call, “BLOCKED CALL” will be shown on LCD
 - **“Message Icon”**
If you apply message service to your telephone company, LCD will display Message icon of post box when there is a message left. When you read this message, the message icon will disappear.

Reviewing the Caller ID List

- Press the **▲UP** or **▼DOWN** buttons to review the incoming calls (50 calls max.)
- Press the **▲UP** or **▼DOWN** buttons for more than three (3) seconds for quick review.

Erasing Data from the Caller ID List

- In the on-hook or off-hook state, press the **▲UP** or **▼DOWN** buttons to select the wanted number, press the **DEL** button and the LCD will display “DELETE CALL?”, then press the **DEL** button again to confirm.
- Under on-hook or off-hook state, if press the **DEL** continuously more than three seconds, the LCD will display “DEL ALL CALLS?” Press the **DEL** button once more and the entire Caller ID list will be erased.

Calling a Number from the Caller ID List

- In the on-hook or off-hook state, press the **▲UP** or **▼DOWN** buttons to select the desired number.
- Press the **DIAL** button once, the number will be dialed out after two (2) seconds automatically. Press the **DIAL** button twice to dial the number out adding '0' as the first digit.

Last Number Redial

The last outgoing number can be redialed automatically just by pressing the **REDIAL** button in the off-hook state. This is useful especially if the line is busy.

OPERATIONAL INSTRUCTIONS

Flash Function

When in an office equipped with PABX, this telephone makes it easy to transfer calls

- Ask caller to wait and press the **FLASH** button once
- Dial the extension number of the recipient.
- When the party answers, just hang up the handset
- When the line is busy or nobody answers, press **FLASH** button again to re-connect with the caller

Mute Function

Holding down the **MUTE** button prevents the other party from hearing your conversation with other people on your side of the call until the button is released

IMPORTANT NOTE: To operate this unit, you must have "CALLER ID SERVICE" setup with your local telephone company. Some functions such as CALLER NAME INDICATION will only operate if such services are included in the user's Caller ID program with the local telephone company.

Basic Instructions for Making a Phone Call

1. Remove the handset from base and listen for dial tone.
2. Listen for a dial tone to indicate that the phone is connected.
3. Dial the number you wish to call using the number pad.

Basic Instructions for Receiving a Phone Call

Telephone will ring to alert the user of an incoming call.

1. Lift the handset, hold earpiece to your ear and speak into the mouthpiece.
2. To hang up, return the handset to the base at the conclusion of call.

TROUBLESHOOTING & SPECIFICATIONS

Troubleshooting

- **No Display on LCD Screen**
 - Brightness on display may be turned down.
 - *Increase brightness level.*
 - No batteries or batteries are improperly installed.
 - *If no batteries, install (4) AAA batteries as directed or*
 - *Install optional AC Adapter*
 - *Make sure batteries observe to polarities (+/-) as indicated inside the battery compartment.*
- **No Dial Tone when handset is picked up**
 - Phone may not be connected properly.
 - *Make sure the handset jack is connected to the base jack using the coiled wire.*
 - *Make sure the base jack (TEL-LINE) jack is connected to the wall telephone jack using the flat wire.*
 - Telephone service may be interrupted by the telephone company
 - *Contact your telephone company to check the status of your service.*
- **Static or interruptions during phone conversation**
 - Bad connection between phones
 - *Hang up and dial number again*
 - Harsh weather conditions and/or lightning
 - *Hang up and dial number when weather conditions improve*
- **Can only receive incoming calls and cannot make outgoing calls**
 - Telephone service may be limited or suspended by your telephone company
 - *Contact your telephone company to check the status of your service.*

Specifications

- **Inputs & Outputs**
 - Telephone line jack
 - Handset line jack
 - Power Adapter (AC/DC) input jack
- **Power Sources**
 - 9V (AC/DC) Power Adapter
 - 6V (AAA 1.5V x 4)Battery (for backup)
- **Power Consumption: 0.6W**



TEL: 516-626-7188

FAX: 516-626-7105

website: www.jWIN.com

© 2007 jWIN Electronics Corp. All rights reserved. No portion of this printed material or product enclosed herewith including design, shape and graphics, may be reproduced or transmitted in any form without the expressed written consent of jWIN Electronics Corp. by any means, electronic or mechanical, including photocopying, recording, or by use of an information storage and retrieval system. Any unauthorized distribution or reproduction of this printed material or product, or any portion thereof, will be prosecuted to the fullest possible extent of the law.

Printed in China